



# Náhradní dálkový ovladač 4v1

Tento ovladač je naprogramován na požadované zařízení.

**Po vložení baterií nejprve stiskněte tlačítko pro volbu zařízení | TV | VCR/DVD | SAT | AUX |**

Některé speciální funkce ovladače (např. teletext nebo barevná tlačítka v menu) mohou fungovat až po stisku tlačítka Shift - viz. tabulka s popisem funkcí vzhledem k originálnímu ovladači.

Název tlačítka originálního ovladače	TV		DVD/VCR		SAT		AUX	
					GOSAT GS 7060 HDI			
	Přímo	Přes Shift	Přímo	Přes Shift	Přímo	Přes Shift	Přímo	Přes Shift
POW					Power			
AV					V.Format			
TEXT					Teletext			
TV					TV/ Radio			
TIMER					Sleep			
SUBT.					Subtitle			
EXPAND					Zoom	Sat		
BACK					Recall	Last		
UPDATE					<< Back	> <		
REVRAL					>>  Next	> Play Slow		
TXT STOP					Stop			
INFO					Pause			
RED					Record	Red		
GREEN					Rew	Green		
YELLOW					Play	Yellow		
BLUE					Fwd	Blue		
AUDIO					Audio			
UP					Up			
PICT					Rec List	Capture		
LEFT					Left			
OK					OK	Bookmark		
RIGHT					Right	Book.Next		
MENU					Menu	Select		
DOWN					Down			
EXIT					Exit			
VOL+					Volume +			
I+					Info			
CH+					Channel +	Page +		
VOL-					Volume -			
MUTE					Mute			
CH-					Channel -	Page -		
1					1			
2					2 ABC			
3					3 DEF			
4					4 GHI			
5					5 JKL			
6					6 MNO			
7					7 PQRS			
8					8 TUV			
9					9 WXYZ			
-/--					Guide			
0/10					0			
P/C					Fav			